RECESSED GRID FIXTURE INSTALLATION

PAGE 1 OF 2

INSTRUCTIONS APPLY TO THE FOLLOWING DAY-O-LITE TROFFER MODELS:


NASL-2821 SERIES

BEFORE INSTALLATION OR DISCONNECT POWER SERVICING. RISK OF ELECTRICAL SHOCK.







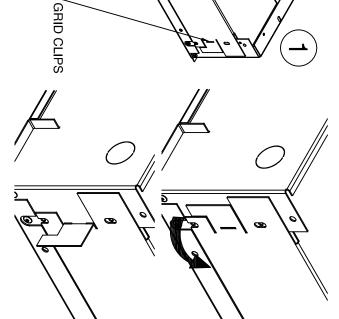

(BY OTHERS TIE WIRES

- AWAY FROM HOUSING 1. BEND THE FOUR GRID CLIPS 90 DEGREES
- GRID OPENING FROM ABOVE GRID. 2. DROP FIXTURE INTO APPROPRIATE SIZED
- 3. INSTALL TIE WIRE TO FIXTURE AND SECURE OTHER END TO APPROPRIATE STRUCTURE TO SUPPORT WEIGHT OF FIXTURE.

FOR JOB SPECIFIC WIRING CONNECTOR PER LOCAL ELECTRICAL CODES. INSTALL SUPPLY WIRES AND FIXTURE WIRES USING APPROPRIATE 4. REMOVE ACCESS PLATE AND/OR ELECTRICAL STANDARD WIRING DIAGRAM SHOWN, REFER TO JOB DRAWINGS KNOCKOUT BRING FEED WIRES INTO FIXTURE. APPROPRIATE STRAIN RELIEF PER LOCAL ELECTRICAL CODES. CONNECT

5.REINSTALL ACCESS PLATE AFTER ALL WIRING CONNECTIONS ARE MADE, INSTALLATION IS COMPLETE

WITH SIMILAIR INSTALLATION. BE SURE TO UNDERSTAND ALL PROCEDURES PRIOR TO INSTALLATION. IMPORTANT: THE NATIONAL ELECTRIC CODE REQUIRES THAT ANY FIXTURE IN EXCESS OF 50 POUNDS MUST BE INDEPENDENTLY SUPPORTED OF THE OUTLET BOX. DAY-O-LITE IS SPECIFIC, CONSULT SHOP DRAWINGS BEFORE CONSTRUCTING ROWS. STANDARD OPTIONS/SIZES SHOWN, OTHER OPTIONS AVAILABLE NOT RESPONSIBLE FOR INADEQUATE REINFORCEMENT OF STRUCTURAL SUPPORT SYSTEMS. DAY-O-LITE RESERVES THE RIGHT TO MAKE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN. DISCONNECT POWER DURING INSTALLATION/SERVICING. ROW CONFIGURATION IS JOB THE PROPERTY OF DAY-O-LITE AND THE INFORMATION IT CONTAINS MAY NOT BE USED WITHOUT WRITTEN CONSENT OF DAY-O-LITE. ANY MECHANICAL OR MATERIAL CHANGES TO THE FIXTURES WHICH DO NOT AFFECT THE APPEARANCE OR PERFORMANCE. THIS PRINT IS CONTACT INFORMATION: NASL-2821----E-mail: sales@dayolite.com WWW: http://www.dayolite.com 126 Chestnut Street, Warwick, RI 02888



Tel. (401) 467-8232 Fax. (401) 941-2960 Lighting Without Limits

SHEET 1 OF 2

10/12/23

RECESSED GRID FIXTURE INSTALLATION

INSTRUCTIONS APPLY TO THE FOLLOWING DAY-O-LITE TROFFER MODELS:

NASL-2821 SERIES










1. BEND THE FOUR GRID CLIPS 90 DEGREES AWAY FROM HOUSING


2. DROP FIXTURE INTO APPROPRIATE SIZED GRID OPENING FROM ABOVE GRID.

SUPPORT WEIGHT OF FIXTURE. OTHER END TO APPROPRIATE STRUCTURE TO 3. INSTALL TIE WIRE TO FIXTURE AND SECURE

> FOR JOB SPECIFIC WIRING CONNECTOR PER LOCAL ELECTRICAL CODES. INSTALL 4. REMOVE ACCESS PLATE AND/OR ELECTRICAL STANDARD WIRING DIAGRAM SHOWN, REFER TO JOB DRAWINGS APPROPRIATE STRAIN RELIEF PER LOCAL ELECTRICAL CODES. SUPPLY WIRES AND FIXTURE WIRES USING APPROPRIATE KNOCKOUT BRING FEED WIRES INTO FIXTURE. CONNECT

5.REINSTALL ACCESS PLATE AFTER ALL WIRING CONNECTIONS ARE MADE, INSTALLATION IS COMPLETE

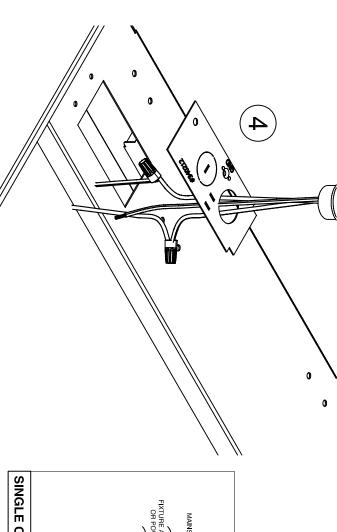

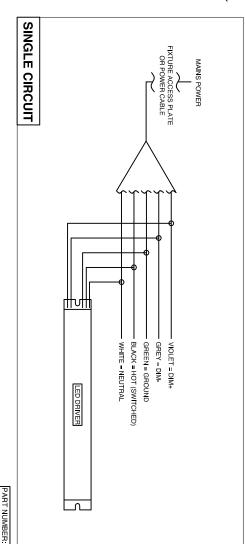

NOT RESPONSIBLE FOR INADEQUATE REINFORCEMENT OF STRUCTURAL SUPPORT SYSTEMS. DAY-O-LITE RESERVES THE RIGHT TO MAKE CODE REQUIRES THAT ANY FIXTURE IN EXCESS OF 50 POUNDS MUST BE INDEPENDENTLY SUPPORTED OF THE OUTLET BOX. DAY-O-LITE IS MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN. DISCONNECT POWER DURING INSTALLATION/SERVICING. ROW CONFIGURATION IS JOB SPECIFIC, CONSULT SHOP DRAWINGS BEFORE CONSTRUCTING ROWS. STANDARD OPTIONS/SIZES SHOWN, OTHER OPTIONS AVAILABLE ANY MECHANICAL OR MATERIAL CHANGES TO THE FIXTURES WHICH DO NOT AFFECT THE APPEARANCE OR PERFORMANCE. THIS PRINT IS WITH SIMILAIR INSTALLATION. BE SURE TO UNDERSTAND ALL PROCEDURES PRIOR TO INSTALLATION. IMPORTANT: THE NATIONAL ELECTRIC THE PROPERTY OF DAY-O-LITE AND THE INFORMATION IT CONTAINS MAY NOT BE USED WITHOUT WRITTEN CONSENT OF DAY-O-LITE.

> CONTACT INFORMATION: NASL-2821----

> > SHEET 2 OF 2

10/12/23

ISSUED ON 970128A0

E-mail: sales@dayolite.com WWW: http://www.dayolite.com Tel. (401) 467-8232 | Fax. (401) 941-2960 126 Chestnut Street, Warwick, RI 02888

Lighting Without Limits