
SKLL SURFACE MOUNT INSTALLATION



RISK OF ELECTRICAL SHOCK.
DISCONNECT POWER
BEFORE INSTALLATION OR
SERVICING.




TO BE INSTALLED BY A
QUALIFIED ELECTRICIAN IN
ACCORDANCE TO LOCAL &
NATIONAL ELECTRIC CODES.






CEILING TO BE PROPERLY REINFORCED TO SUPPORT WEIGHT OF THE FIXTURE.



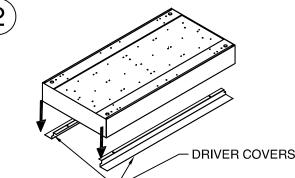

MOUNTING HARDWARE (BY OTHERS)

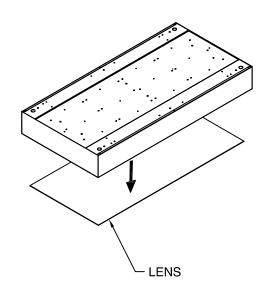


1. REMOVE LENS FROM FIXTURE

2. REMOVE DRIVER COVERS FROM FIXTURE.

3. USING APPROPRIATE HARDWARE, SECURE FIXTURE HOUSING TO CEILING

4. CONNECT SUPPLY WIRES TO FIXTURE

5.RE-INSTALL DRIVER COVER AND LENS

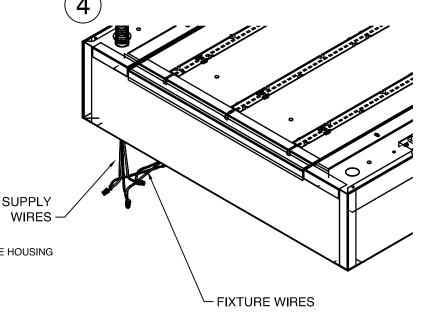

DRIVER COVERS

MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN. DISCONNECT POWER DURING INSTALLATION/SERVICING. ROW CONFIGURATION IS JOB SPECIFIC, CONSULT SHOP DRAWINGS BEFORE CONSTRUCTING ROWS. STANDARD OPTIONS/SIZES SHOWN, OTHER OPTIONS AVAILABLE WITH SIMILAIR INSTALLATION. BE SURE TO UNDERSTAND ALL PROCEDURES PRIOR TO INSTALLATION. IMPORTANT: THE NATIONAL ELECTRIC CODE REQUIRES THAT ANY FIXTURE IN EXCESS OF 50 POUNDS MUST BE INDEPENDENTLY SUPPORTED OF THE OUTLET BOX. DAY-O-LITE IS NOT RESPONSIBLE FOR INADEQUATE REINFORCEMENT OF STRUCTURAL SUPPORT SYSTEMS. DAY-O-LITE RESERVES THE RIGHT TO MAKE ANY MECHANICAL OR MATERIAL CHANGES TO THE FIXTURES WHICH DO NOT AFFECT THE APPEARANCE OR PERFORMANCE. THIS PRINT IS THE PROPERTY OF DAY-O-LITE AND THE INFORMATION IT CONTAINS MAY NOT BE USED WITHOUT WRITTEN CONSENT OF DAY-O-LITE.

		970120A
MODEL NO.:	PAGE:	ISSUED ON:
SKLL	SHEET 1 OF 1	4/12/21

IC CONTACT INFORMATION:

126 Chestnut Street, Warwick, RI 02888
Tel. (401) 467-8232 | Fax. (401) 941-2960
E-mail: sales@dayolite.com
WWW: http://www.dayolite.com



PART NUMBER: